




Manual

Installation 2605L/R, 2606 burglar resistance brackets


2605KIT4

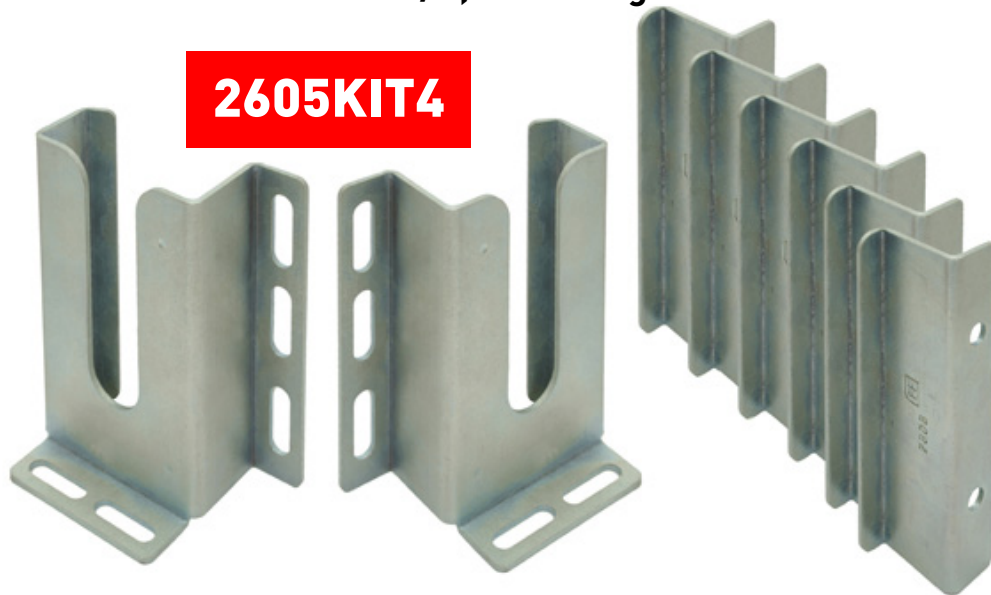

Manual for installing anti-burglar brackets in (garage) doors. View a demonstration movie on installation and on burglar attempts with and without the system on FlexiForce FF-TV channel on Youtube®

STEP 1

Place bottom bracket on floor and mark holes for floor mounting. Holes for fitting to vertical track are available (If not, mark these also)

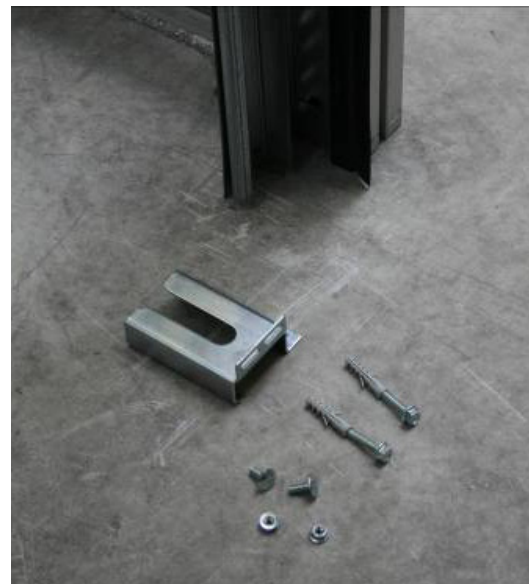

STEP 2

Drill 8 mm holes in concrete floor (and in vertical angle, using 6,5mm steel drill bit). Now mount bracket on floor using 8 mm plugs and corresponding screws (not included in product delivery).




FF Manual

Installation 2605L/R, 2606 burglar resistance brackets


STEP 3

Fit 2605L/R brackets to vertical track using 6 mm bolts/nuts 1062B, 1062M.

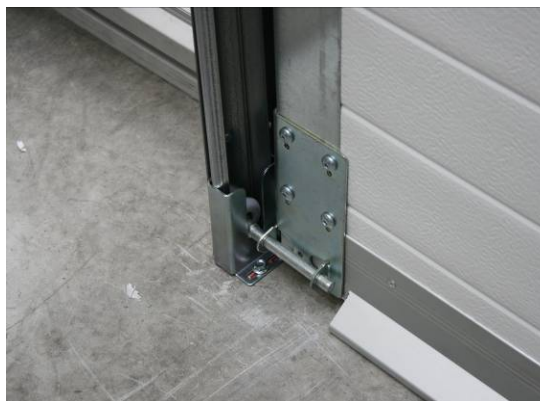



STEP 4

Mark position of nylon roller in "door closed". Position 2606 bracket and mark drilling holes.

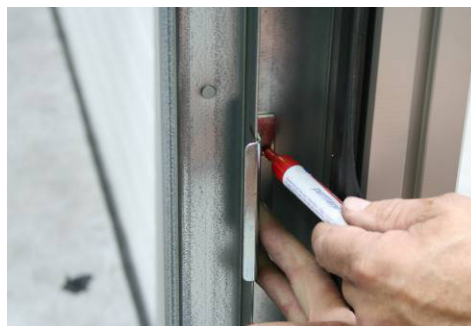


STEP 5

Drill holes using a 6,5mm drill bit, then fit bracket using 1006B / 1062M press bolt/nut.

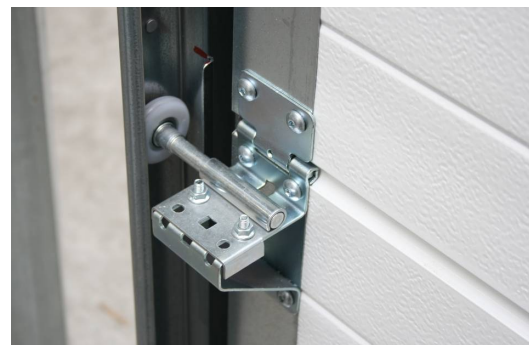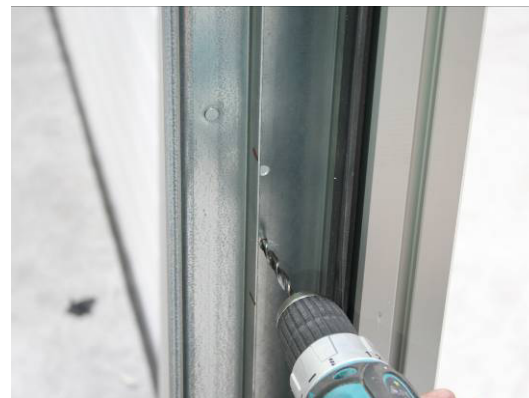

STEP 6 (TIP)

To secure the nylon rollers in the roller carriers of the hinges, top and bottom brackets, drill a hole in the end of the roller shaft and secure the roller with a cotter pin. (future FF standard product).

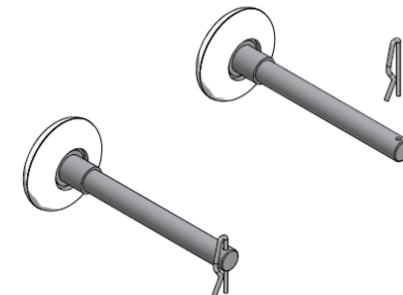

MORE INFORMATION:

Product pricing and technical specifications in our online catalogue www.flexiforce.com.

Installation and demonstration of the system on FF-TV (YouTube).

YouTube

